



Easy model change

Headband to Cap mounted



Release the cup from the headband slider attachment.



Make a cut in the comfort strap...




...and release the cable.



Attach the springarm to the cup.



Push the cap attachment into the slot.

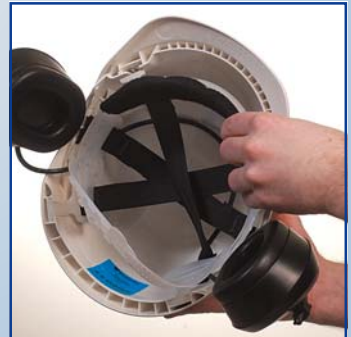

Remove the harness inside the cap and place the cable in the bottom.



Easy model change

Cap mounted to Headband



Remove the harness inside the cap and pull out the cable.




Release the cap attachment from the slot.



Remove the springarm from the cup.



Attach the headband to the cup.

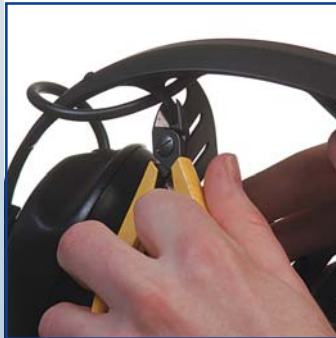

Make a cut in the comfortstrap and insert the cable.



Place the cable in between the cable fixture.